



Ebatlar / Dimensions mm	Tolerans / Tolerances mm
4	+ 0.8
5	+ 0.8
6	+ 0.8
7	+ 0.8
8	+ 0.8
10	+ 0.8
12	+ 1.0
15	+ 1.0
18	+ 1.0
20	+ 1.0
22	+ 1.0
25	+ 1.0
28	+ 1.3
30	+ 1.3
35	+ 1.3

Ebatlar / Dimensions mm	Tolerans / Tolerances mm
40	+ 1.3
45	+ 1.3
50	+ 1.3
60	+ 1.5
65	+ 1.5
70	+ 1.5
75	+ 1.5
80	+ 1.5
90	+ 1.5
100	+ 1.5
120	+ 1.5
150	+ 1.5
180	+ 1.5
200	+ 1.5